

**Head office**

Malaz - Salahidin Road  
P.O Box 1246 Riyadh 11431

Tel : +966 11 477 77 00  
Fax: +966 11 478 94 69

ContactUs@noortek.com

**Western Region Office**

Tahliya Street  
P.O Box 20798 Jeddah 21465

Tel : +966 12 6650888  
Fax: +966 12 6633413

**Eastern Region Office**

King Abdulaziz Street  
P.O Box 8492 Dammam 31482

Tel : +966 13 8336509  
Fax: +966 13 8329065

[www.noortek.com](http://www.noortek.com)

### Installation Instructions

- 1- Product should be handled by care with person has experience in lighting unit installation.
- 2- Only the proper working voltage and frequency (as indicated in product sticker & Data sheets) should be applied.
- 3- Handle with care product sensitive components such has aluminum louver and reflectors.
- 4- Be sure that product is not connected to supply during any installation activities.
- 5- Test the product after finalizing installation by connecting to proper supply and confirm it is working well. If not kindly check the installation instruction again.
- 6- Re tight all screws and brackets again after installing light source to keep the IP rating.

### Maintenance Instructions

- 1- Apply maintenance activities in case of lamp replace or periodic maintenance programs.
- 2- Remove cover or louvers with care using soft gloves and keep in clean place till re install again after maintains activities.
- 3- Change light source with same specified type.
- 4- Clean the inner part using soft cloth and not allowed to use any chemicals, that can affect the painting and decrees life time
- 6- Re tight all screws and brackets again after installing light source to keep the IP rating.

Note : Refer to back side for additional mounting instructions

Application Conditions  
 Ambient temperature range -20 to +50 °C

